

# Complete Air-Cooled Volkswagen Maintenance Schedule

# **Every drive:**

check idiot light operation

# Every fuel stop:

listen for noises

check oil level after fueling

look for fuel and/or oil leaks

check belt condition and tension

log fuel consumption and miles travelled

# Every 3,000 miles:

change oil

check and adjust valves

check dwell/timing, lubricate distributor

check fire pressure

check tire tread level

check brake fluid level

adjust drum brakes (inspect thickness) & check parking brake adjustment

check CV boots for cracks

check ball joint/tie rod boots for cracks

check steering wheel free play & sounds

check all brake components for fluid leaks

check brake fluid level

check operation of all lights

check ATF level\*

check wheel bearing/tie rod play

#### \*if applicable

# Every 6,000 miles:

clean oil strainer

rotate tires

clean air filter(s)

check clutch pedal free play

inspect battery terminals and ground straps for corrosion

lubricate all hinges and latches

clean and gap spark plugs

check ATF pan bolt torque\*

check generator brushes\*

synchronize dual carbs\*

check shocks for leaks or damage

check road drat boot\*

# Every 10,000 miles:

grease front beam

clean/replace air filter

Inspect/clean/replace fuel filter

check transaxle gear oil level

check engine end play

check CV joint bolt torque

#### Every 30,000 miles:

change transaxle gear oil

clean and repack front wheel bearings

replace EGR filter\*

change ATF\*

#### Every 50,000 miles:

clean and repack rear wheel bearings

#### Every two years:

flush brake fluid



# New VW Engine Maintenance Schedule

In addition to all standard maintenance items!

#### First start:

crank engine without spark plugs until oil light goes out run for 20 minutes above 2,000 RPM (camshaft break-in) adjust idle change oil and filter\*

### The next morning:

adjust valves
tighten all exhaust fasteners
drive hard on mixed roads, avoiding long idle and extended freeway speeds

# The next morning:

tighten all exhaust fasteners check oil level

#### At 200 miles:

tighten all exhaust fasteners check and adjust valves check oil level

#### At 500 and 1,000 miles:

change oil and filter\*
check and adjust valves
tighten all exhaust fasteners

When breaking in a new engine, do your best to ensure the engine gets a full warm up every time you start it. (For example, do not start it just to move it around the driveway.) Avoid long high-speed drives in the first 100 miles, and try to give the engine lots of hard accelerations and decelerations.

\*if applicable